

DIGIOP® Desktop Hardware Quick Start Guide

Congratulations on your new DIGIOP® Video and Data Management System

This guide provides setup instructions for your desktop hardware. Quick Start Guides and Manuals for the software can be found at www.digiop.com/support. For more information, contact DIGIOP® Support at:

800.968.3606 • support@digiop.com • www.digiop.com

1. Getting Started

Unpacking the Contents

Items included with your system:

- Quick Start Guide
- Surge Protection Notice
- Video adapter dongle(s)
- Power cord
- Mouse and Keyboard


Choose a Proper Location

Select a location that meets the following:


- Adequate ventilation to avoid heat
- Climate-controlled environment with minimal dust
- Uninterrupted Power Supply (UPS)
- Moisture-free environment
- A place away from direct sunlight

2. About Your System


Front View

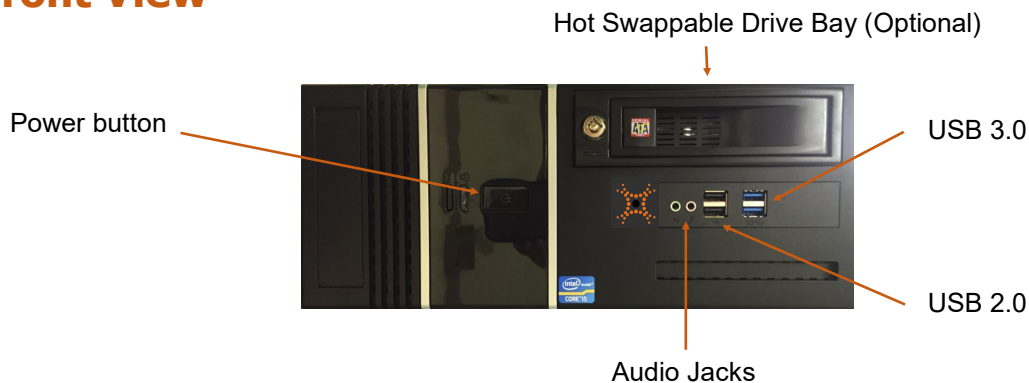

Back View

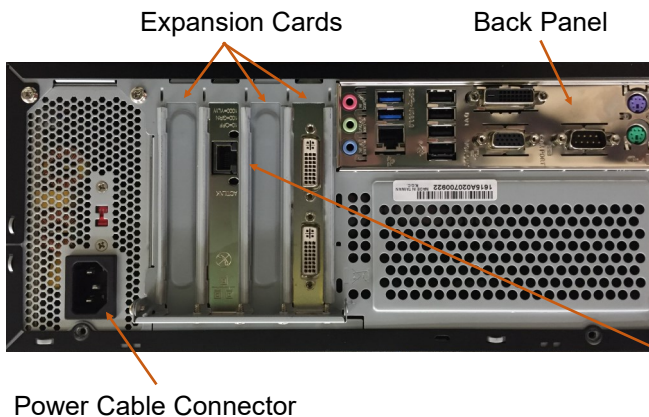



Back Panel

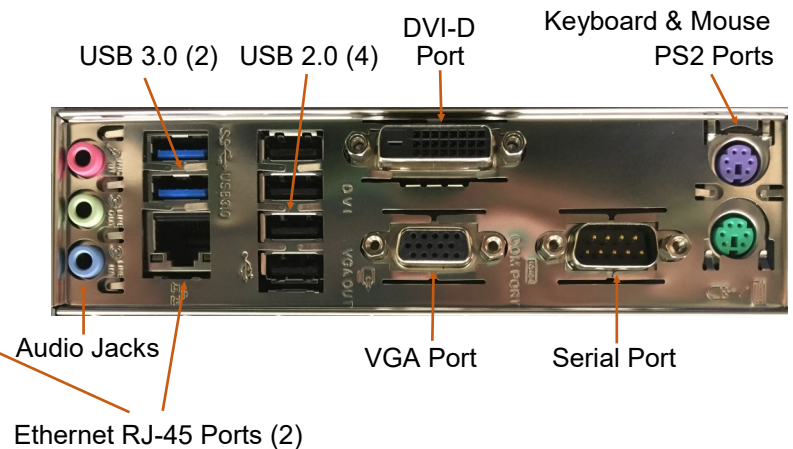



3. Setting Up Your System


1. Connect a monitor(s) to the VGA and/or DVI-D ports.
2. Connect the network cable to the Ethernet port on the Back Panel.
3. Connect the keyboard and mouse to the USB 2.0 ports.
4. Connect the power cable. Press the power buttons on the monitor and computer.

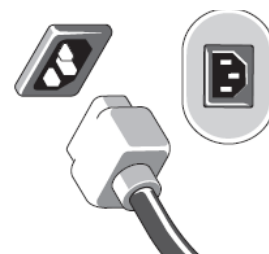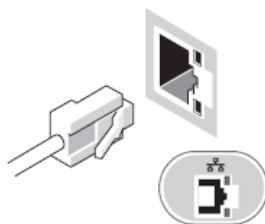

Back Panel



Expansion Cards

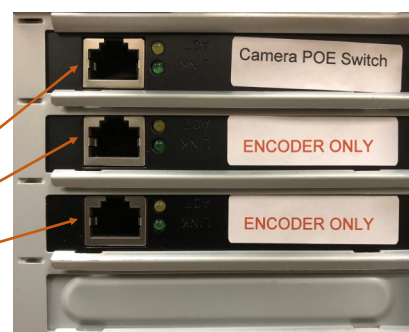

Ethernet Ports

4. Add IP Cameras

Connect all of your IP cameras to a POE switch. Ensure that the POE switch has adequate power on each port to handle each camera. Connect an Ethernet cable between the POE switch and the Ethernet port on the Expansion Card labeled *Camera POE Switch*. DIGIOP® recommends that you do not connect a cable from your network to the POE switch. This will keep the IP camera traffic isolated on its own switch.

5. Add a DIGIOP® Encoder (optional add-on)

Connect all of your analog cameras to your DIGIOP® Encoder. Connect the provided orange Ethernet patch cable between the DIGIOP® and the Ethernet port on the Expansion Card labeled *Encoder Only*. If you have more than one Encoder, connect the second Encoder to the second Ethernet port on the Expansion Card labeled *Encoder Only* with the provided orange Ethernet patch cable. If you have 2 *Encoder Only* Ethernet ports, it does not matter in which order you connect the Encoders.